 


remote control user guide



The LED (red light) blinks to confirm programming and operation



Press AUDIO, VCR, TV, or CBL once to select a home entertainment component to control.



Press POWER once to turn on or off the selected home entertainment component



Use SETUP for all programming sequences.



Use the keypad (0-9) to directly select channels (e.g., 09 or 31)



Press MUTE once to turn sound off or on.



Press ENTER once after entering channel numbers on some TV models.



Use volume + (or volume -) to raise (or lower) the sound volume.



Use CH + (or CH -) to select the next higher (or lower) channel.



Press LAST once to recall the last channel and to page back one screen in the main menu.



Use FAV to cycle through your favorite channels that are stored on your cable converter.



Use GUIDE to display the program guide.



Press PPV/LOCK once to display the pay-per-view menu or to lock out a specific channel on your cable converter. Use EXIT to exit out of your cable converter's menu and guide.



Use cursor keys to move the cursor in the program guide and menu screens.



Use SELECT/OK to choose options, PPV events, and to tune programs from the program guide.



Use INFO to display current channel and program information.



 
Press MENU once to display your cable converter's screen menu.



Use PAGE (or PAGE) to page up or down through menu screens and the program guide.



Slide the door open to reveal less often used keys such as VCR transport buttons and cable converter features.



In the VCR and TV modes, use the REW, PLAY, FF, REC, STOP and PAUSE keys to control your VCR.

To record a program, press REC twice.



Reserved for cable converter features (see your cable converter manual).



Press TV/VCR once to switch VCR to view TV channels or tape. This key will also control the input select feature on most TVs.